

# HOW TO:

## HOT WAX

### A SNOWBOARD

#### Need

- \* Wax (select wax based on temperature you will be riding)
- \* Brush to remove grime
- \* Iron (any household iron will do)
- \* Screwdriver (for the bindings)
- \* Scraper/Brush to smooth board



#### Step 1: Take off bindings

Use the screwdriver to remove screws holding bindings into the board. Remove bindings after taking out all the screws.




#### Step 2: Remove grime/buildup

Use a nylon brush to get the grime built up on the bottom of the board. Work from tip to tail as you rub across the board. The board should be visually clean when complete.

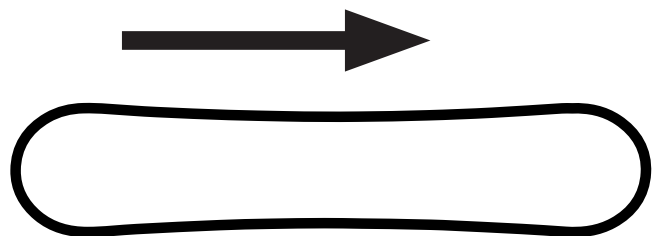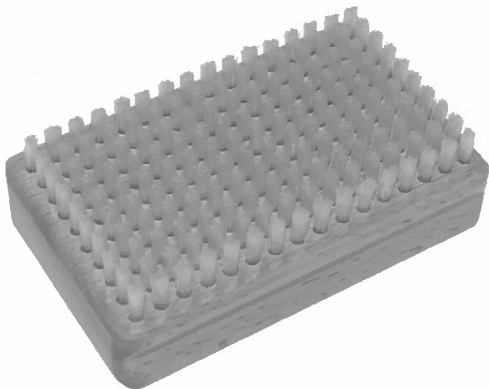


### Step 3: Apply hot wax

Heat up iron. When the iron is hot, touch your wax to the iron until it starts to melt (the wax should not be smoking, if wax is smoking the iron will need to be turned down) .At this point you can either drip the hot wax across the board or wipe the hot wax across the board. Start around the edges and work your way in. Try to evenly spread the wax around the entire board.

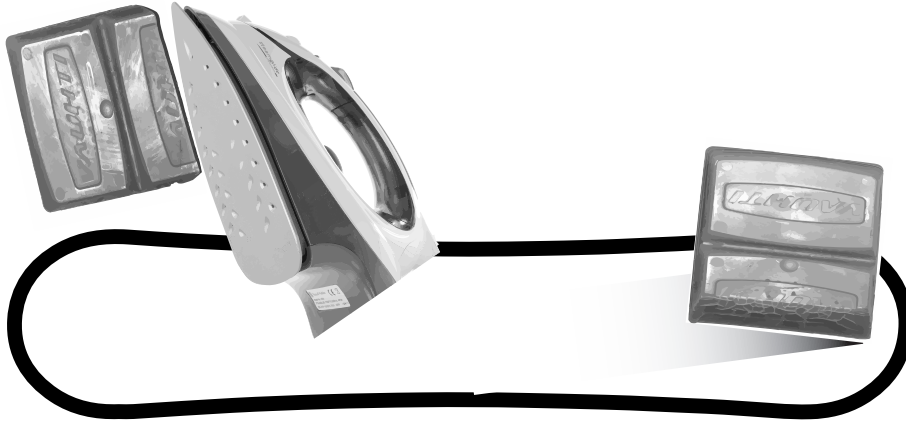

### Step 4: Spread the wax

Spread the wax around the board by placing the iron on the board and continuously moving it around. Be careful not to hold the iron in one spot for too long, it will burn the board. Do this until the bottom of the board looks entirely and evenly coated in wax. When moving the iron around, it is best to work from top to bottom of the board.

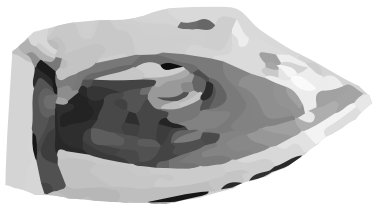

### Step 5: Let it cool

Let the wax cool and dry on the snowboard. This should take between a half hour to an hour.

## Step 6: Finishing touch

Once the board has sat and dried, it must be smoothed out and excess wax must be removed. Working tip to tale for the finihsing touches is best. Scrape or use textured brush to remove excess wax. The wax should not be clearly visable. When the board appears and feels smooth. It is optional to now use a brush designed to polish after waxing and brushing.

