


Ultrasonic Cleaning



Wash Tank

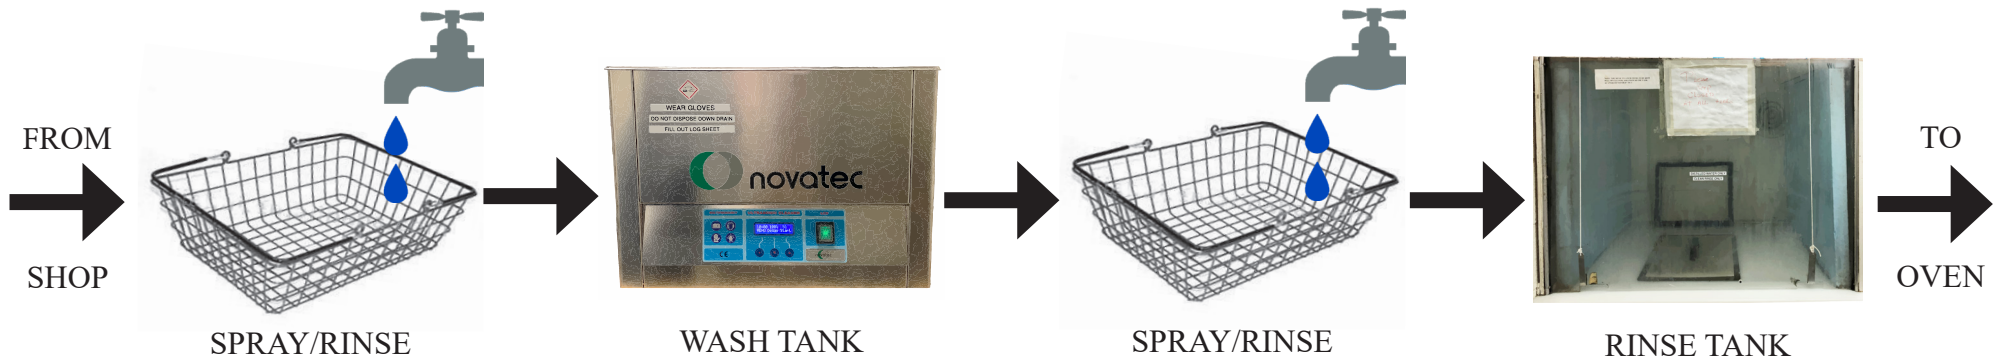

Do's

- Coolant
- Cutting/taping fluid
- Tramp oils
- Steel, Stainless Steel, aluminum, copper



Don'ts

- Very oily/dirty parts
- Potted parts
- PCB and electronics

Rinse Tank



Do's

- Parts from Wash Tank
- Electronics
- Potted Parts



Don'ts

- Soap
- Flux
- Oils
- Solvents

PPE when loading and unloading the Wash Tank

- Glasses/Facemask
- Gloves



Warning

- Contents of Wash Tank can not go down the drain
- Causes skin corrosion/irritation, causes serious eye damage.